

VIII.3.3-RES-SNGL-S-EVAC26 SUBROUTINE EVAC26

Description

Subroutine EVAC26 is a utility subroutine used in evacuation options 8, 9 and 10 for evacuation of induced surcharge storage.

Calling Sequence

CALL EVAC26 (STOR,ELEV)

Argument List

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
STOR	Input	R*4	NSE	Storages for pool elevation versus storage relation
ELEV	Input	R*4	NSE	Elevations for elevation versus storage relation

Dimension variable NSE is in common block RESV26.